

## 

**Battery Information:** 


- · Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
- Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickelcadmium) batteries. Only batteries of the same or equivalent type recommended should be used.
- Always remove weak or dead batteries from the product; do not short-circuit supply terminals.
- Insert batteries with correct polarity (+/-) as shown.





## Important Tips

- 2 Alkaline batteries AA (LR6) are recommended.
- · Rechargeable batteries are not recommended.
- · Remove rechargeable batteries from toy before charging; they must be charged only under adult supervision.
- Non-rechargeable batteries must not be recharged.
- · Keep components free of dust; do not immerse or use in water.
- Do not dispose of batteries in a fire; they could leak or explode and cause injury.
- · Remove all batteries if the toy will not be used for a long period of time.
- Do not put rods smaller than 2 inches in any openings of the motor; they will damage the motor, and cannot be removed.



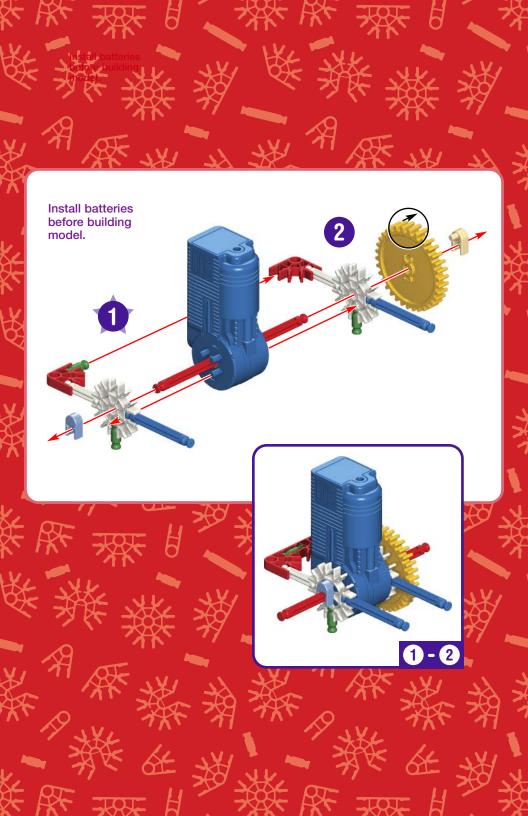

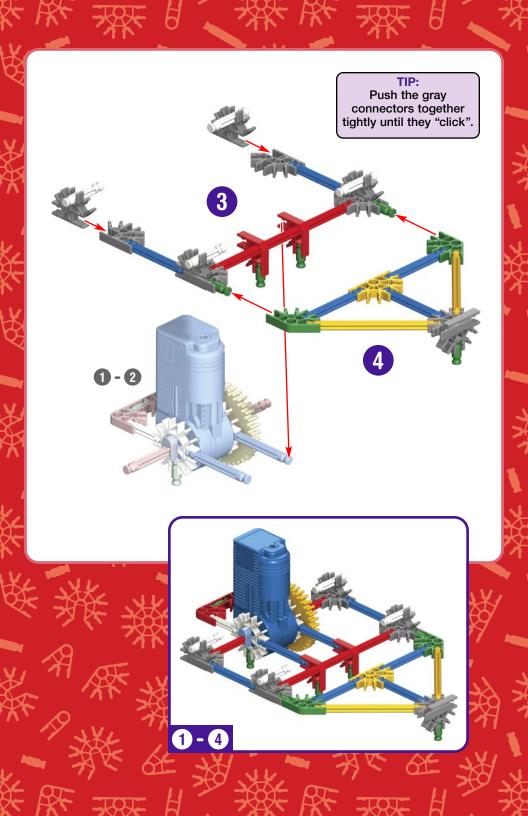

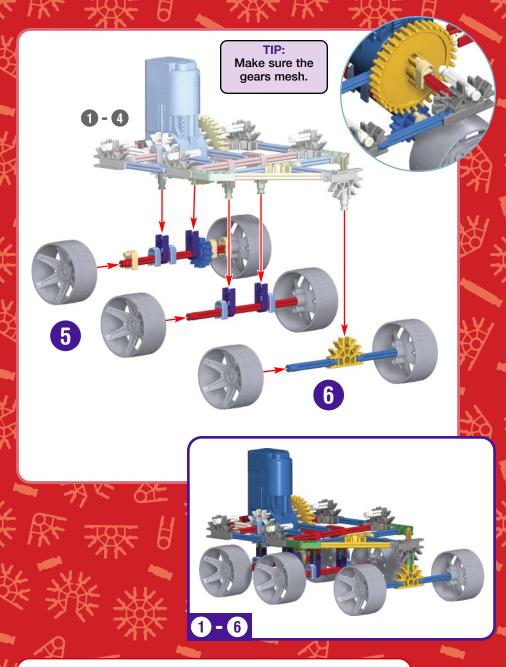

Visit our Web site at:

www.knexeducation.com

E-mail us at:

abcknex@knex.com

Telephone us at:

1-888-ABC-KNEX (English Only) Monday-Friday 8:30am-5:00pm EST Write to us at:

K'NEX Education P.O. Box 700 Hatfield, PA 19440-0700

©2010 K'NEX Limited Partnership Group. K'NEX and K'NEX Education are registered trademarks of K'NEX Limited Partnership Group.